# FVZEON

32" LED MONİTÖR KULLANIM KLAVUZU VE GARANTİ BELGESİ

X32F180

# FAZEON

FAZEON Her karede üstün performans, her oyunda tam kontrol! Oyuncu monitörlerimiz, ultra hızlı yenileme hızları ve çarpıcı görsel netlik sunarak oyun deneyiminizi zirveye taşıyor. Gecikmesiz tepki süresi ve canlı renklerle donatılmış bu monitörler, sizi oyunun tam kalbine götürmek için tasarlandı. Kazanmak için ihtiyaç duyduğunuz her şey burada!"

#### KULLANIM KILAVUZU

#### Sayın Müşterimiz,

Bu ürünü satın aldığınız için teşekkür ederiz. Bu belge LCD renkli monitörün nasıl kurulacağını ve kullanılacağını açıklamaktadır. Doğru ve güvenli kullanım için bilgiler içeren bu kılavuzu dikkatlice okuyun. Gerektiğinde başvurabilmek için bu kılavuzu elinizin altında bulundurun.

#### ÜRÜN TANIMI VE KULLANIM TÜRÜ

LCD renkli monitör çok sağlam bir yapı sunar. Sürekli çalışma için tasarlanmıştır ve kapalı devre TV sistemlerinde aşırı yorulma riski olmadan kullanılabilir. Düz Panel Ekran aktif matrisli, ince film transistörlü (TFT), sıvı kristal ekrana (LCD) sahiptir.

#### GENEL ÖZELLİKLER

- Görüntüleme alanı
- > Dahil olmayan braket ile duvara montaj
- > Bir kompozit yükseltme, iki DP, iki HDMI
- Oturur pozisyonda veya ayakta dururken ve bir pozisyondan diğerine geçerken görüntülemeye olanak tanıyan geniş eğim

Ekranın kolay ayarlanması ve optimizasyonu için çok dilli OSD menüsü

#### KUTUNUN AÇILMASI

Ambalajın ve içindekilerin gözle görülür şekilde hasar görmediğini kontrol edin. Parçalar eksik veya hasarlıysa derhal satıcıyla iletişime geçin. Bu durumda cihazı kullanmaya çalışmayın. Hasar görmüşse ürünü orijinal ambalajında geri gönderin.

#### KUTU İÇERİĞİ

- LCD monitör
- Güç Adaptörü
- HDMI kablosu
- DP kablosu
- Kullanım kılavuzu

Önemli Not: Aksesuarlar önceden haber verilmeksizin değiştirilebilir.

#### UYARILAR

GÜÇ

- Cihazı çalıştırmak için yalnızca sağlanan güç ünitesini kullanın. Güç ünitesini fişe takmadan önce şebeke değerini kontrol edin.
- > Cihazın fişini çekmek için kabloyu çekmeyin.

#### GÜVENLİK ÖNLEMLERİ

- Yangın ve elektrik çarpması riskini önlemek için cihazı yağmur ve nemden uzak tutun. İçine malzeme (katı veya sıvı) sokmayın. Kazara böyle bir durum meydana gelirse, cihazın elektrik bağlantısını kesin ve yetkili personel tarafından kontrol edilmesini sağlayın.
- Cihazı asla açmayın. Her durumda, onarım için kalifiye personele veya yetkili servis merkezine başvurun.
- > Kazara hasar görmesini önlemek için cihazı çocuklardan uzak tutunuz.
- Elektrik çarpmasını veya mekanik hasarı önlemek için cihaza ıslak elle dokunmayın. Cihaz
- düşerse veya dış kasası hasar görürse cihazı kullanmayın. Cihaz bu koşullarda kullanılırsa elektrik çarpması riski vardır. Satıcıya veya yetkili montajcıya başvurun.
- Monitör belirli bir süre kullanılmayacaksa güç kablosunun çıkarılması tavsiye edilir.

#### KURULUM ÖNLEMLERİ

- Cihazın aşırı ısınmasını önlemek için, muhafazadaki yuvalardan hava akışına izin verecek bir konuma yerleştirin. Bir rafın içine monte ederken en az 5 cm boş alan olduğundan emin olun. Aynı nedenle, radyatör veya sıcak hava kanalları gibi ısı kaynakları monte etmeyin. Doğrudan güneş ışığından uzak tutun. Aşırı toza, mekanik titreşimlere veya darbelere maruz kalan
- alanlara kurmayın. Bu cihazı sallanan veya eğimli bir masa gibi dengesiz bir yüzeye yerleştirmeyin. Cihaz düşerek yaralanmalara veya mekanik arızalara neden olabilir.
- Cihazı neme veya suya maruz kalabileceği bir yere kurmayın. Cihazın üzerine su püskürtmeyin: yangın, elektrik çarpması veya mekanik arıza riski.
- Cihazın içine su veya başka bir madde girmesi durumunda cihazı kullanmayı bırakın: yangın ve elektrik çarpması riski. Satıcıya veya yetkili montajcıya başvurun.
- Kabindeki yuvalar ve açıklıklar havalandırma için sağlanmıştır. Bu açıklıklar engellenmemeli veya kapatılmamalıdır.
- Cihazın üzerine ağır veya ısı üreten nesneler koymayın: bu, kasaya zarar verebilir ve/veya iç sıcaklığı artırarak arızalara neden olabilir.
- Dış kasanın deforme olmasını ve iç parçaların aşırı ısınmasını önlemek için cihaz çalışırken üzerini bir bezle örtmeyin: yangın, elektrik çarpması ve mekanik arıza riski.
- > Arızaları önlemek için mıknatısları ve mıknatıslı nesneleri cihazdan uzak tutunuz.
- Cihazı duman, buhar, nem, toz veya yoğun titreşimlerin olduğu ortamlarda kullanmayınız.
- Cihazı soğuk bir yerden sıcak bir yere veya tam tersi bir yere taşıdıktan hemen sonra çalıştırmadan önce bir süre bekleyin. Ortalama üç saat bekleyin: bu, cihazın yeni ortama (sıcaklık, nem vb.) uyum sağlamasına olanak tanıyacaktır.
- Monitör plastik bir taban ve lastik ayaklarla donatılmıştır. Masa veya sehpa gibi yatay bir yüzey üzerine yerleştirilebilir. Cihazın sıkıca sabitlendiğinden ve dengesiz desteklere veya yüzeylere dayanmadığından emin olun. Düşürmek ciddi yaralanmalara neden olabilir ve cihaza zarar verebilir.
- > Mükemmel bir görüntü elde etmek için parlaklığı ve kontrastı ayarlamayı unutmayın.
- Monitör, bir braket (ürünle birlikte verilmez) aracılığıyla duvara da monte edilebilir.

#### 1.3.4 CIHAZIN TEMIZLENMESI

- > Toz ve kiri temizlemek için kuru bir bezle nazikçe ovun.
- > Kir sadece kuru bir bezle giderilemiyorsa bezi nötr deterjana batırın.
- Boyanın deforme olmasını, bozulmasını veya çizilmesini önlemek için cihazı temizlemek için uçucu sıvılar (benzin, alkol, çözücüler vb.) veya kimyasal işlem görmüş giysiler kullanmayın.

#### 1.3.5 GİZLİLİK VE TELİF HAKKI

LED monitör Oyun için bir cihazdır. Görüntülerin kaydedilmesi ülkenizde yürürlükte olan yasalara tabidir. Telif hakkı ile korunan görüntülerin kaydedilmesi yasaktır. Ürün kullanıcıları, video sinyallerinin izlenmesi ve kaydedilmesi ile ilgili tüm yerel kuralları ve düzenlemeleri kontrol etmek ve bunlara uymakla sorumludur. Üretici, bu ürünün yürürlükteki yasalara uygun olmayan kullanımından SORUMLU OLMAYACAKTIR.

#### Mönitör girişleri



DP Kablo

Güç Adaptörü

Kullanıcı Kılavuzu

# Monitör Kontrol Düğmeleri

		Monitör 7	
		M	EO
Tuş	İşlevi		
Μ	Ana OSD Menüsünü açın ve alt menüyü seçin.		
	Ana OSD Menüsünde Yukarı Git Seçilen bir öğenin değerini artırın.		
	Ana OSD Menüsünde Aşağı Git Seçilen bir öğenin değerini azaltın.		
E	Sinyal kaynağını seçin veya OSD'den çıkın.		
Ċ	Monitörü açın veya kapa	tın.	

#### ILK KURULUM

Monitörü bir elektrik prizine bağlayın.

1. Monitörü açmak için veya monitördeki GÜÇ düğmesine basın (Gösterge mavi olacaktır).

2. İlgili kabloyu monitördeki ilgili girişe bağlayın. kaynak otomatik olarak algılar.

3. Girişler arasında geçiş yapmak için kaynak menüsüne girmek için "Kaynak" düğmesine basın.

Otomatik Seçim, DP, HDMI1 arasında giriş kaynağını seçmek için "◀" ve "▶" tuşlarını kullanın.



#### OSD MENU

#### A. Giriş Kaynağı

DP		Resolution:2560x1440@180Hz
Input Source	● DP	
Brightness/Contrast	HDMI1	
Color Settings	HDMI2	
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180Hz	

Sinyal girişini DP, HDMI1, HDMI2 olarak değiştirin veya monitörün kaynağı Otomatik Seçmesini sağlayın.

DP		Resolution:2560x1440@180
Input Source	Brightness	50
Brightness/Contrast	Contrast	50
Color Settings	DCR	Off
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180Hz	

#### B . Parlaklık/Kontrast

Parlaklık: Ekran parlaklığı değerini 0 ila 100 arasında değiştirin.

Kontrast: Ekran kontrast değerini 0 ila 100 arasında ayarlayın.

DCR: Dinamik Kontrast Oranı özelliğini Açık veya Kapalı konuma getirin.

#### C . Renk Ayarları

DP		Resolution:2560x1440@180Hz
Input Source	Gamma	2.2
Brightness/Contrast	Picture Mode	Standard
Color Settings	Color Temperature	Warm
Picture Quality Settings	Hue	50
Display	Saturation	50
Audio	Low Blue Light	0
OSD		
Other		
	Window1: InputSource: DP Resolution: 2560x1440@180I	Hz

Gama: Ekran Gama değerini şu şekilde değiştirin: 2.0,2.2,2.4.

Pirture Modu: Ön ayar modunu şu şekilde değiştirin: Standand, fotoğraf, film, Oyun, FPS, RTS.

Renk Sıcaklığı: Renk sıcaklığını şu şekilde değiştirin: Normal, Sıcak, Soğuk, Kullanıcı.

Renk Tonu: Ekran Ton değerini o ile 100 arasında değiştirin.

Doygunluk: Ekran Doygunluk değerini 0 ila 100 arasında değiştirin.

Düşük Mavi Işık: Ekran Doygunluk değerini 0 ila 100 arasında değiştirin.

#### D. Görüntü Kalitesi Ayarları

DP		Resolution:2560x1440@180Hz
Input Source	Sharpness	50
Brightness/Contrast	Response Time	Off
Color Settings	Noise Reduction	Off
Picture Quality Settings	Super Resolution	Off
Display	Dynamic Luminance Control	Off
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180Hz	

Keskinlik: Ekran Keskinlik değerini 0 ila 100 arasında değiştirin.

Tepki Süresi: Tepki Süresi Değerini Düşük, Orta, Yüksek arasından seçin veya Kapalı konuma getirin. Gürültü Azaltma: Gürültü Azaltma Değerini Düşük, Orta, Yüksek arasından seçin veya Kapatın. Süper Çözünürlük: Süper Çözünürlük Değerini Düşük, Orta, Yüksek arasından seçin veya Kapatın. Dinamik Parlaklık Kontrolü: Dinamik Parlaklık Kontrolü özelliğini Açık veya Kapalı konuma getirin.

#### E . Ekran

DP		Resolution:2560x1440@180Hz
Input Source	Aspect Ratio	Wide Screen
Brightness/Contrast		
Color Settings		
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@18	0Hz

En Boy Oranı: Görüntü en boy oranını Tam Ekran, Otomatik, 4:3 veya 1:1 olarak değiştirin.

F . Ses

DP		Resolution:2560x1440@180Hz
Input Source	Mute	On
Brightness/Contrast	Volume	50
Color Settings		
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@1	80Hz

Sessiz: Ses kaynağının sesini kapatmak için Açık veya Kapalı öğesini seçin. Ses Seviyesi: Ses kaynağı ses seviyesini 0 ila 100 arasında değiştirin.

#### G . OSD

DP		Resolution:2560x1440@180Hz
Input Source	Language	English
Brightness/Contrast	OSD H Position	50
Color Settings	OSD V Position	50
Picture Quality Settings	OSD Transparency	20
Display	OSD Timer Out	20
Audio	OSD Rotation	Normal
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180H	z

Dil: OSD Menüsü görüntüleme dilini değiştirin.

OSD H-Konumu: OSD Menüsünün yatay konumunu değiştirin.

OSD V-Konumu: OSD Menüsünün dikey konumunu değiştirin.

OSD Şeffaflığı: OSD Menüsünün saydamlık değerini 0 ila 100 arasında değiştirin.

OSD Zamanlayıcı Çıkışı: OSD Menüsünün otomatik olarak çıkmadan önce ne kadar süre açık kalacağını değiştirin.

OSD Döndürme: OSD Menüsünü döndürün.

H. Diğer

DP		Resolution:2560x1440@180Hz
Input Source	FreeSync (Adaptive Sync)	Off
Brightness/Contrast	HDR	Off
Color Settings	MPRT	Off
Picture Quality Settings	Flicker Free	On
Display	LightEffect	On
Audio	Firmware Update	
OSD	Reset	
Other		
	<mark>Window1:</mark> InputSource: DP Resolution: 2560x1440@	⊇180Hz

FreeSync Modu: FreeSync'i Açın veya Kapatın.

HDR: HDR'yi Açın (HDMI 2.0 girişi gerektirir).

MPRT: Açık veya Kapalı.

Titreşimsiz: Açık veya Kapalı.

LightEffect (Işık Efekti): Açık veya Kapalı.

Firmware Update: Firmware güncellemesini seçin.

Sıfırla: Orijinal ayarları geri yüklemek için bu işleve basın.

# **KULLANICININ DİKKATİNE**

#### 1. Cihazı Kurmadan Önce

- Monitörünüzü kullanmadan önce bu kılavuzu dikkatlice okuyun.
- Monitörünüzü açmadan önce tüm ambalaj malzemelerini ve koruyucu filmleri çıkarın.

#### 2. Güvenlik Uyarıları

- Monitörü yalnızca belirtilen voltajda bir güç kaynağına bağlayın.
- Cihazın üzerine sıvı dökmemeye özen gösterin.
- Monitörü aşırı sıcak, nemli veya tozlu ortamlarda kullanmayın.
- Güç kablosunu sıkışma veya ezilmelere karşı koruyun.

#### 3. Kurulum ve Bağlantı

- Monitörünüzü düz ve stabil bir yüzeye yerleştirin.
- Cihazı kurarken, havalandırma deliklerinin kapatılmadığından emin olun.
- Kabloları bağlamadan önce cihazın kapalı olduğundan emin olun.

#### 4. Kullanım Sırasında Dikkat Edilmesi Gerekenler

- Uzun süreli kullanımlarda göz sağlığınızı korumak için düzenli aralıklarla mola verin.
- Monitörün parlaklık ve kontrast ayarlarını, göz yorgunluğunu en aza indirecek şekilde ayarlayın.
- Cihazın arkasında bulunan bağlantı noktalarına zarar verebilecek sert hareketlerden kaçının.

#### 5. Bakım ve Temizlik

- Monitörünüzü temizlemeden önce mutlaka fişini prizden çekin.
- Ekranı temizlemek için yumuşak, kuru bir bez kullanın. Sert kimyasal temizleyiciler kullanmayın.

#### 6. Sorun Giderme

- Monitör açılmıyorsa, güç kablosunun doğru bağlandığından ve prizde elektrik olduğundan emin olun.
- Görüntüde titreme veya renk bozukluğu varsa bağlantı kablolarını kontrol edin.

#### 7. Garanti ve Teknik Destek

- Ürününüz garanti kapsamındaysa yetkili servis dışında müdahalede bulunmayın.
- Teknik destek için kullanım kılavuzunda belirtilen iletişim bilgilerini kullanabilirsiniz.

# **KULLANICI HATALARI**

#### 1. Yanlış Voltaj Kullanımı

- Monitörü belirtilen voltaj dışında bir güç kaynağına bağlamak, cihazın arızalanmasına veya tamamen bozulmasına neden olabilir.
- Çözüm: Monitörün güç adaptörünün ve priz voltajının uyumlu olduğundan emin olun.

#### 2. Havalandırma Deliklerinin Kapatılması

- Monitörün arka kısmındaki havalandırma deliklerinin kapatılması, cihazın aşırı ısınmasına yol açar ve donanıma zarar verebilir.
- Çözüm: Monitörü, havalandırmanın serbest kalacağı şekilde yerleştirin ve çevresinde en az 10 cm boşluk bırakın.

#### 3. Sıvı Teması

- Monitöre sıvı dökülmesi kısa devreye ve kalıcı hasara neden olabilir.
- Çözüm: Monitörü sıvılardan uzak bir yerde konumlandırın ve sıvı dökülmesi durumunda cihazı hemen kapatarak yetkili servise başvurun.

#### 4. Yanlış Kablo Bağlantıları

- HDMI, DisplayPort veya güç kablosunun yanlış takılması görüntü sorunlarına veya bağlantı noktalarının hasar görmesine neden olabilir.
- Çözüm: Kabloları bağlamadan önce doğru bağlantı noktalarını kontrol edin ve bağlantıları yavaşça gerçekleştirin.

#### 5. Sert Müdahaleler

- Monitörün ekranına sert cisimlerle dokunmak veya bastırmak ekranın çatlamasına ya da piksel bozukluklarına yol açabilir.
- Çözüm: Ekrana yalnızca yumuşak bir bezle müdahale edin ve fiziksel darbelerden kaçının.

#### 6. Uzun Süreli Sabit Görüntü Kullanımı

- Uzun süre aynı görüntünün ekranda kalması, "görüntü yanması" (burn-in) sorununa neden olabilir.
- Çözüm: Monitörünüzde ekran koruyucu kullanın veya uzun süreli kullanımlarda ekrandaki görüntüyü değiştirin.

#### 7. Uyumsuz Yazılım ve Sürücü Kullanımı

- Monitörle uyumsuz sürücülerin veya yazılımların yüklenmesi, görüntü performansında sorunlara yol açabilir.
- Çözüm: Üreticinin önerdiği sürücüleri ve yazılımları kullanın.

#### 8. Yanlış Temizlik Yöntemleri

- Sert kimyasal temizleyiciler veya ıslak bez kullanmak, ekranın kaplamasına zarar verebilir.
- Çözüm: Ekranı temizlerken yalnızca yumuşak, kuru veya hafif nemli bir mikrofiber bez kullanın.

#### 9. Monitörün Dengesiz Yüzeylere Yerleştirilmesi

- Monitörün eğik veya dengesiz bir yüzeye yerleştirilmesi, düşme veya devrilme riskine yol açabilir.
- Çözüm: Monitörü düz, stabil ve kaymaz bir yüzeye yerleştirin.

#### 10. Yetkisiz Müdahaleler

- Monitörün iç kısmına yetkisiz müdahale edilmesi, cihazın garanti kapsamı dışına çıkmasına ve daha büyük arızalara neden olabilir.
- Çözüm: Cihazda bir sorun olduğunda yalnızca yetkili servise başvurun.kullanım kılavuzunda belirtilen iletişim bilgilerini kullanabilirsiniz.

# ARIZA VE TEKNİK DESTEK

#### 1. Hasar Durumunda Yapılması Gerekenler;

#### Fiziksel Hasar;

- Cihazda çatlak, kırık veya ezik gibi fiziksel hasarlar fark ederseniz:
- Monitörü kullanmayı derhal durdurun.
- Cihazın elektrik bağlantısını kesin ve fişi prizden çekin.

• Fiziksel hasarların garanti kapsamı dışında değerlendirilebileceğini unutmayın. Yetkili servisle iletişime geçin.

#### Görüntü Sorunları;

- Ekranda titreme, renk bozulması veya görüntü kaybı gibi sorunlar varsa:
- Bağlantı kablolarını kontrol edin ve sıkıca takılı olduklarından emin olun.
- Farklı bir kablo veya cihaz kullanarak sorunun monitörden kaynaklanıp kaynaklanmadığını test edin.
- Sorun devam ederse teknik destek alın.

#### Elektrik Sorunları;

- Monitör açılmıyorsa veya düzensiz çalışıyorsa:
- Güç kablosunun sağlamlığını kontrol edin.
- Prizin çalıştığından emin olmak için farklı bir elektrik kaynağı deneyin.
- Sorun çözülmezse cihazı yetkili servise götürün.

#### 2. Teknik Destek Alımı

#### Yetkili Servis;

- Monitörünüzde herhangi bir sorun tespit ettiğinizde, yalnızca üretici tarafından yetkilendirilmiş servis merkezlerinden destek alın.
- Yetkisiz müdahaleler cihazın garanti kapsamı dışında kalmasına neden olabilir.

#### İletişim;

- Teknik destek için üreticinin müşteri hizmetleriyle iletişime geçebilirsiniz. İletişim bilgileri genellikle kullanım kılavuzunda veya ürün kutusunda yer alır.
- Cihazın seri numarasını ve satın alma belgesini yanınızda bulundurun.

#### 3. Teknik Destek Alırken Dikkat Edilmesi Gerekenler

- Cihazı servise göndermeden önce kişisel ayarlarınızı ve verilerinizi yedekleyin.
- Servis merkezine gönderim sırasında monitörünüzü orijinal ambalajında veya güvenli bir şekilde paketleyerek koruyun.ü ve güvenli bir şekilde çalışabilmesi için yalnızca yetkili teknik destekten yardım almanız önerilir.

## **UYGUNLUK BEYANI**

# **CE** AB YÖNETMELİĞİNE UYUM BEYANI

Aşağıda belirtilen ürünün, Avrupa Birliği'nin CE işareti gerekliliklerine uygun olduğunu beyan ederiz. Bu beyan, ürünün ilgili Avrupa Birliği direktifleri ve standartlarına uygun olarak tasarlandığını, üretildiğini ve test edildiğini garanti eder.

Ürün Testi ve Değerlendirme;

Bu ürün, belirtilen standartlara uygunluğu doğrulamak amacıyla yetkili test laboratuvarlarında test edilmiştir.

Marka: FAZEON Model: X32F180

Bu uygunluk beyanı, yalnızca yukarıda belirtilen ürünler için geçerlidir ve Avrupa Birliği pazarında CE işareti ile kullanılmasına izin verir.

Not: Bu belge, ürünün CE işareti gerekliliklerini karşıladığını ve AB standartlarına uygun olduğunu resmi olarak belgelemektedir.



Ürün veya ürün ambalajının üzerinde bu sembolün görülmesi halinde bu atık ev eşyası atığı olarak atılamaz. Atığınızı, elektrikli ve elektronik cihazların geri dönüşümünü için uygulanabilir geri alma şemasına göre ele alarak atmalısınız. Bu donanımın geri dönüşümü hakkında daha fazla bilgi için yerel bayiye yada mağazaya başvurunuz. Materyallerin geri dönüşümü doğal kaynakların korunmasını ve insan sağlığına ve çevreye zarar verilmeksizin geri dönüştürülmesini güvence etmektedir.

# GARANTİ ŞARTLARI

#### Garanti Süresi;

• Garanti süresi, ürünün satın alındığı tarihten itibaren \*2 yıl\* geçerlidir. Satış belgesi (fatura veya fiş) garanti süresinin başlangıç tarihi olarak kabul edilir.

#### Garanti Kapsamı;

- Garanti, ürünün üretim ve malzeme hatalarından kaynaklanan arızaları kapsar.
- Kasa içindeki dahili bileşenler (fanlar, RGB aydınlatmalar, USB portlar vb.) garanti kapsamındadır.

#### Garanti Dışında Kalan Durumlar;

- Kullanıcı hatasından kaynaklanan hasarlar (örneğin, yanlış montaj, aşırı güç uygulama, sıvı teması, düşme veya darbe).
- Yetkisiz kişiler tarafından yapılan tamir veya modifikasyonlar.
- Yanlış voltaj kullanımı sonucu oluşan arızalar.
- Normal kullanım sonucu oluşan aşınma ve yıpranma (örneğin, boyanın solması veya çizilmesi).

#### Garanti Hizmetinden Yararlanma;

- Garanti talebinde bulunmak için, ürünle birlikte satış belgesi ve garanti belgesi ibraz edilmelidir.
- Ürün, orijinal ambalajında veya uygun bir şekilde paketlenerek teknik servise gönderilmelidir.

#### Tamir ve Değişim Süreci;

- Garanti kapsamında onarılabilir arızalar ücretsiz olarak tamir edilir.
- Onarım mümkün değilse, ürün yenisiyle değiştirilir veya eşdeğer bir ürünle ikame edilir.
- Onarım veya değişim süresi, ürünün teknik servise ulaşmasından itibaren en fazla \*20 iş günü\*dür.

#### Ürün İade ve Değişim Şartları;

- Ürün, satın alındıktan sonraki \*14 gün\* içinde kusursuz ve kullanılmamış bir durumda iade edilebilir.
- Kusurlu ürünlerde, garanti süresi boyunca değişim veya iade işlemi yapılabilir.

#### Kullanıcı Sorumlulukları;

- Ürün kullanım kılavuzuna uygun şekilde kullanılmalıdır.
- Aşırı ısıya, neme veya sıvı temasına karşı dikkatli olunmalıdır.

#### Yasal Haklar;

• Bu garanti şartları, Tüketici Kanunu'nda belirtilen haklara ek olarak sunulmaktadır ve yasal haklarınızı kısıtlamaz.

# GARANTİ BELGESİ

Satıcı firmanın		
Ünvanı	:	G5F Teknoloji San. Tic. A.Ş.
Adres	:	Küçükbakkalköy Mah. Nartanesi SK. B Blok No:1/1
		Ataşehir,İstanbul
Destek Merkezi	:	+90 (212) 212 74 85
Kaşe	:	$\bigcap$
		GSF TEKNOLOJI
		Küçükbakkalköy Mah. Nartanesi Sk. B Blok
		Kozyatağı V.D.: 388 188 1884
MALIN		
Cinsi	:	Oyuncu Monitörü
Markası	:	FAZEON
Modeli	:	X32F180
Bandrol ve seri no	:	
Beslim tarihi ve yeri	:	20 iş günü
Azami tamir süresi	:	3 yıl
Garanti	:	
Satıcı firmanın		
Ünvan	:	
Adresi	:	
Tel-faks	:	
Fatura tarihi ve no	:	

# FAZEON

# FVZEON

32" LED MONITOR USER MANUAL AND WARRANTY CERTIFICATE

X32F180

# FAZEON

FAZEON Superior performance in every frame, total control in every game! Our gaming monitors take your gaming experience to the next level with ultra-fast refresh rates and stunning visual clarity. Equipped with lag-free response times and vibrant colors, these monitors are designed to take you right to the heart of the game. Every thing you need to win is right here!

#### GENERAL INFORMATION

#### Dear Customer,

Thank you for having purchased this product. This document describes how to install and use the LCD colour monitor. Read this manual which contains information for correct, safe use carefully. Keep this manual at hand so that you can refer to it when needed.

#### PRODUCT DESCRIPTION AND TYPE OF USE

The LCD color monitor presents a very rugged structure. It is designed for continuous operation and can be used in closed circuit TV systems without risks of excessive fatigue. The Flat Panel Display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD).

#### GENERAL FEATURES

- Display area
- > Wall mounting with not included bracket
- > One composite upgrade, two DP, two HDMI
- Wide inclination to allow viewing either from a seated position or standing up and when moving from one position to the other

Multilingual OSD menu for easy setting and optimization of the display

#### OPENING THE BOX

Check that the packing and the contents are not visibly damaged. Contact the retailer immediately if parts are either missing or damaged. Do not attempt to use the device in this case. Send the product back in its original packing if it is damaged.

#### CONTENTS OF THE BOX

- LCD monitor
- Power Adaptor
- HDMI cable
- DP cable
- User's manual

Important Note: Accessories may be changed without prior notice.

#### WARNINGS

#### POWER

- Only use the power unit provided to power the device. Check mains rating before plugging the power unit in.
- > Do not pull the cable to unplug the device.

#### SAFETY PRECAUTIONS

- Keep the device away from rain and humidity to prevent risk of fire and electrocution. Do not introduce material (solid or liquid) inside. If this should accidentally occur, disconnect the device from the mains and have it inspected by qualified personnel.
- Never open the device. In all cases, contact the qualified personnel or authorized service center for repairs.
- > Keep the device away from children, to prevent accidental damage.
- > Do not touch the device with wet hands to prevent electrical shock or mechanical damage.
- > Do not use the device if it should fall or the external casing is damaged. Risk of electrocution if the device is used in such conditions. Contact the retailer or authorized installer.
- > It is advisable to disconnect the power wire if the monitor is not used for a certain time.

#### INSTALLATION PRECAUTIONS

- To prevent overheating the device, arrange it in a position allowing the flow of air through the slots in the casing. Ensure at least 5 cm of free space when installing inside a rack. For the same reason, do not install sources of heat, such as radiators or hot air ducts. Keep away from direct sunlight. Do not install in areas subject to excessive dust, mechanical vibrations or shocks.
- Do not arrange this device on an unstable surface, such as a tottering or slanted table. The device could fall causing injury or mechanical failures.
- Do not install the device in a place where it could be exposed to humidity or water. Do not direct a jet of water onto the device: risk of fire, electrocution or mechanical failure.
- Stop using the device if water or other material should penetrate inside: risk of fire and electrocution. Contact the retailer or authorized installer.
- Slots and openings in the cabinet are provided for ventilation. These openings must not be blocked or covered.
- Do not place heavy or heat generating objects on top of the device: this could damage the casing and/or increase internal temperature causing faults.
- Do not cover the device with a cloth while it is running to prevent deforming the external casing and overheating the internal parts: risk of fire, electrocution and mechanical failure.
- > Keep magnets and magnetized objects away from the device to prevent faults.
- > Do not use the device in presence of smoke, vapor, humidity, dust or intense vibrations.
- Wait for a while before operating a device immediately after transporting it from a cold place to a warm place and vice versa. Wait on average for three hours: this will allow the device to adapt to the new ambient (temperature, humidity, etc.).
- The monitor is provided with a plastic base and rubber feet. It can be positioned on a horizontal surface, such as a desk or a table. Make sure that the device is fastened firmly and that it is not resting on unstable supports or surfaces. Dropping could cause severe injury and damage the device.
- Remember to adjust the brightness and contrast to obtain a perfect image.
- > The monitor can also be installed on the wall by means of a bracket (not provided).

#### 1.3.4 CLEANING THE DEVICE

- > Rub delicately with a dry cloth to remove dust and dirt.
- > Dip the cloth in neutral detergent if dirt cannot be eliminated with a dry cloth alone.
- Do not use volatile liquids (such a petrol, alcohol, solvents, etc.) or chemically treated clothes to clean the device to prevent deformation, deterioration or scratches to the paint finish.

#### 1.3.5 PRI VACY AND COPYRI GHT

The LED monitor is a device for Gaming. Recording of images is subject to the laws in force in your country. Recording of images protected by copyright is forbidden.

Product users shall be responsible for checking and respecting all local rules and regulations concerning monitoring and recording video signals. The manufacturing SHALL NOT BELIABLE for use of this product not in compliance with the laws in force.

#### Mon it or Inputs



#### PACKAGE INCLUDES



31.5inch Monitor



Stand



HDMI Cable



DP Cable





Power Adapter

**User Manual** 

### Monitor Control Buttons

	Monitor Buttons		
Tuş			
M	Open the main OSD Menu and select the submenu.		
	Go Up in the Main OSD Menu Increase the value of a selected item.		
	Go Down in the Main OSD Menu Decrease the value of a selected item.		
E	Select the signal source or exit the OSD.		
Ċ	Switch the monitor on or off.		

#### INITIAL SETUP

Connect the monitor to a power outlet.

- 1. Press the POWER button on the monitor or to turn it on (The indicator will be blue).
- 2. Connect the relevant cable to the corresponding input on the monitor. The source will be automatically detected.
- 3. To change between inputs, press the "Source" button to enter the source menu. Use the
  "▼"and" ▲ " buttons to choose the input source between Auto Select, DP1, DP2, and HDMI1, HDMI2.



#### OSD MENU

#### A. Input Source

DP		Resolution:2560x1440@180Hz
Input Source	• DP	
Brightness/Contrast	HDMI1	
Color Settings	HDMI2	
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180Hz	

Change the signal input to DP, HDMI1, HDMI2, or have the monitor Auto Select the source.

#### B . Brightness/Contrast

DP		Resolution:2560x1440@180Hz
Input Source	Brightness	50
Brightness/Contrast	Contrast	50
Color Settings	DCR	Off
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180Hz	

Brightness: Change the display brightness value from 0 to 100.

Contrast: Adjust the display contrast value from 0 to 100.

DCR: Switch the Dynamic Contrast Ratio feature On or Off.

#### C . Colour Settings

DP		Resolution:2560x1440@180Hz
Input Source	Gamma	2.2
Brightness/Contrast	Picture Mode	Standard
Color Settings	Color Temperature	Warm
Picture Quality Settings	Hue	50
Display	Saturation	50
Audio	Low Blue Light	0
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180I	Hz

Gamma Change the screen Gamma value as follows: 2.0,2.2,2.4.

Preset Mode: Change the preset mode as: Standand, photo, film, Game, FPS, RTS.

Colour Temperature: Change the colour temperature as: Normal, Warm, Cool, User.

Colour Tone: Change the Screen Tone value between o and 100.

Saturation: Change the display Saturation value from 0 to 100.

Low Blue Light: Change the Display Saturation value from 0 to 100.

#### D . Image Quality Settings

DP		Resolution:2560x1440@180Hz
Input Source	Sharpness	50
Brightness/Contrast	Response Time	Off
Color Settings	Noise Reduction	Off
Picture Quality Settings	Super Resolution	Off
Display	Dynamic Luminance Control	Off
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180Hz	

Sharpness: Change the Display Sharpness value from 0 to 100.

Response Time: Select the Response Time Value from Low, Medium, High, or switch Off. Noise Reduction: Select the Noise Reduction Value from Low, Medium, High, or Switch Off. Super Resolution: Select the Super Resolution Value from Low, Medium, High, or Switch Off. Dynamic Brightness Control: Switch Dynamic Brightness Control On or Off.

#### E . Screen

DP		Resolution:2560x1440@180Hz
Input Source	Aspect Ratio	Wide Screen
Brightness/Contrast		
Color Settings		
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@18	0Hz

Aspect Ratio: Change the image aspect ratio to Full Screen, Auto, 4:3, or 1:1.

#### F . Sound

DP		Resolution:2560x1440@180Hz
Input Source	Mute	On
Brightness/Contrast	Volume	50
Color Settings		
Picture Quality Settings		
Display		
Audio		
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@1	80Hz

Mute: Select On or Off to mute the sound source.

Volume: Change the audio source volume from 0 to 100.

#### G.OSD

DP		Resolution:2560x1440@180Hz
Input Source	Language	English
Brightness/Contrast	OSD H Position	50
Color Settings	OSD V Position	50
Picture Quality Settings	OSD Transparency	20
Display	OSD Timer Out	20
Audio	OSD Rotation	Normal
OSD		
Other		
	Window1: InputSource: pp Resolution: 2560x1440@180H	z

Language: Change the OSD Menu display language.

OSD H-Position: Change the horizontal position of the OSD Menu.

OSD V-Position: Change the vertical position of the OSD Menu.

OSD Transparency: Change the transparency value of the OSD Menu from 0 to 100.

OSD Timer Output: Change how long the OSD Menu stays on before exiting automatically. OSD Rotation: Rotate the OSD Menu.

H. Other

DP		Resolution:2560x1440@180Hz
Input Source	FreeSync (Adaptive Sync)	Off
Brightness/Contrast	HDR	Off
Color Settings	MPRT	Off
Picture Quality Settings	Flicker Free	On
Display	LightEffect	On
Audio	Firmware Update	
OSD	Reset	
Other		
	<mark>Window1:</mark> InputSource: _pp Resolution: 2560x1440@	⊇180Hz

FreeSync Mode: Switch FreeSync On or Off.

HDR: Switch HDR On (requires HDMI 2.0 input).

MPRT: On or Off.

Flicker Free: On or Off.

LightEffect: On or Off.

Firmware Update: Select the firmware update.

Reset: Press this function to restore the original settings.

# **USER'S ATTENTION**

#### 1. Before Installing the Device

- Read this manual carefully before using your monitor.
- Remove all packaging materials and protective films before opening your monitor.

#### 2. Safety Precautions

- Connect the monitor to a power source of the specified voltage only.
- Be careful not to spill liquid on the device.
- Do not use the monitor in extremely hot, humid or dusty environments.
- Protect the power cord from being pinched or crushed.

#### 3. Installation and Connection

- Place your monitor on a flat and stable surface.
- When installing the device, make sure that the ventilation holes are not blocked.
- Make sure the device is turned off before connecting cables.

#### 4. Cautions During Use

- Take regular breaks to protect your eye health during prolonged use.
- Adjust the monitor's brightness and contrast settings to minimize eye strain.
- Avoid sharp movements that may damage the connection points on the back of the device.

#### 5. Maintenance and Cleaning

- Always unplug your monitor before cleaning it.
- Use a soft, dry cloth to clean the screen.

Do not use harsh chemical cleaners.

#### 6. Troubleshooting

• If the monitor does not turn on, make sure the power cable is connected correctly and there is power in the outlet.

• If there is flickering or discoloration in the image, check the connection cables.

#### 7. Warranty and Technical Support

- If your product is under warranty, do not intervene except for authorized service.
- You can use the contact information provided in the user manual for technical support.

# **USER ERRORS**

#### 1. Incorrect Voltage Usage

• Connecting the monitor to a power source other than the specified voltage may cause the device to malfunction or completely break down.

• Solution: Make sure that the monitor's power adapter and the wall outlet voltage are compatible.

#### 2. Blocking the Ventilation Holes

• Blocking the ventilation holes on the back of the monitor may cause the device to overheat and may damage the hardware.

• Solution: Place the monitor so that ventilation is free and leave at least 10 cm of space around it.

#### 3. Liquid Contact

- Liquid spills on the monitor may cause a short circuit and permanent damage.
- Solution: Keep the monitor away from liquids and in the event of a liquid spill, turn off the power immediately and contact authorized service.

#### 4. Incorrect Cable Connections

• Incorrectly connecting the HDMI, DisplayPort or power cable may cause image problems or damage to the ports.

• Solution: Check the correct ports before connecting the cables and make the connections slowly.

#### 5. Rough Interventions

• Touching or pressing the monitor screen with hard objects may cause the screen to crack o pixel defects.

• Solution: Only touch the screen with a soft cloth and avoid physical impacts.

#### 6. Long-Term Fixed Image Use

• Keeping the same image on the screen for a long time may cause "image burn-in" problem.

• Solution: Use a screen saver on your monitor or change the image on the screen during long-term use.

#### 7. Incompatible Software and Driver Use

• Installing drivers or software that are incompatible with the monitor may cause problems in image performance.

• Solution: Use drivers and software recommended by the manufacturer.

#### 8. Incorrect Cleaning Methods

- Using harsh chemical cleaners or wet cloths may damage the coating of the screen.
- Solution: Use only a soft, dry or slightly damp microfiber cloth when cleaning the screen.

#### 9. Placing the Monitor on Unstable Surfaces

- Placing the monitor on a slanted or unstable surface may cause a risk of falling or tipping over.
- Solution: Place the monitor on a flat, stable, and non-slip surface.

#### **10. Unauthorized Interventions**

• Unauthorized interventions inside the monitor may void the warranty and cause more serious malfunctions.

• Solution: In case of a problem with the device, contact only an authorized service.

You can use the contact information provided in the user manual.

# FAILURE AND TECHNICAL SUPPORT

#### 1. What to do in case of damage; Physical Damage;

- If you notice physical damage such as cracks, breaks or dents on the device:
- Stop using the monitor immediately.
- Disconnect the device from the power supply and unplug it.
- Remember that physical damages may be considered outside the scope of warranty.

#### Contact an authorized service.

#### Image Problems;

- If there are problems such as flickering, color distortion or image loss on the screen:
- Check the connection cables and make sure they are firmly connected.
- Test whether the problem is caused by the monitor by using a different cable or device.
- If the problem persists, get technical support.

#### **Electrical Problems;**

- If the monitor does not turn on or works erratically:
- Check the strength of the power cable.
- Try a different power source to make sure the outlet is working.
- If the problem persists, take the device to an authorized service.

#### 2. Getting Technical Support

Authorized Service;

• If you detect any problem with your monitor, only get support from service centers authorized by the manufacturer.

• Unauthorized interventions may void the warranty of the device.

#### Contact;

- You can contact the manufacturer's customer service for technical support. Contact information is usually provided in the user manual or on the product box.
- Have the serial number and proof of purchase of the device with you.

#### 3. Things to Consider When Getting Technical Support

- Back up your personal settings and data before sending the device for service.
- Protect your monitor in its original packaging or by packing it securely during shipment to the service center.

and it is recommended that you only get help from authorized technical support for safe operation.

## **DECLARATION OF CONFORMITY**

# **EU REGULATIONS** DECLARATION OF COMPLIANCE

We declare that the product specified below complies with the CE marking requirements of the European Union. This declaration guarantees that the product has been designed, manufactured and tested in accordance with the relevant European Union directives and standards.

Product Testing and Evaluation;

This product has been tested in authorized test laboratories to verify compliance with the specified standards.

Marka: FAZEON Model: X32F180

This declaration of conformity is only valid for the products listed above and allows use in the European Union market with the CE marking.

Note: This document officially documents that the product meets the CE marking requirements and complies with EU standards.



If this symbol appears on the product or product packaging, this waste cannot be disposed of as household waste. You must dispose of your waste by handling it in accordance with the applicable take-back scheme for the recycling of electrical and electronic equipment. For more information on recycling this equipment, please contact your local dealer or store. Recycling of materials ensures the conservation of natural resources and recycling without harming human health or the environment.

# WARRANTY CONDITIONS

#### Warranty Period;

• The warranty period is valid for \*2 years\* from the date of purchase of the product.

The sales document (invoice or receipt) is accepted as the starting date of the warranty period.

#### Warranty Scope;

- The warranty covers malfunctions caused by manufacturing and material defects of the product.
- Internal components inside the case (fans, RGB lighting, USB ports, etc.) are under warranty.

#### Situations Not Covered by Warranty;

- Damages caused by user error (e.g. incorrect assembly, excessive force application, liquid contact, falling or impact).
- Repairs or modifications made by unauthorized persons.
- Malfunctions caused by incorrect voltage usage.
- Wear and tear caused by normal use (e.g. paint fading or scratching).

#### **Benefiting from Warranty Service;**

- In order to make a warranty claim, the sales document and warranty document must be presented together with the product.
- The product must be sent to the technical service in its original packaging or packaged appropriately.

#### **Repair and Replacement Process;**

- Repairable faults under warranty are repaired free of charge.
- If repair is not possible, the product is replaced with a new one or an equivalent product. The repair or replacement period is a maximum of \*20 business days\* from the date the product reaches the technical service.

#### Product Return and Replacement Conditions;

• The product can be returned in a flawless and unused condition within \*14 days\* after purchase. Defective products can be replaced or returned during the warranty period.

#### User Responsibilities;

- The product must be used in accordance with the user manual.
- Care must be taken against excessive heat, humidity or liquid contact.

#### Legal Rights;

- These warranty terms are provided in addition to the rights specified in the
- · Consumer Law and do not limit your legal rights.

## WARRANTY CERTIFICATE

Seller's	
Title	G5F Teknoloji San. Tic. A.Ş.
Address	<ul> <li>Küçükbakkalköy Mah. Nartanesi SK. B Blok No:1/1 Ataşehir,İstanbul</li> </ul>
Support Center Stamp	+90 (212) 212 74 85 GSF TEKNOLOJI SANAYI TICARET A.Ş. Küçükbakkalköv Mah. Nartanesi Sk. B Blok No:1/1 iç kapı Wo:1 Ataşehir-İstanbul Kozyatağı V.D.: 388 188 1884
GOODS	
Type	Oyuncu Monitörü
Brand	: FAZEON
MODEL	. X32F180
Bandroll and serial number	: 20 iş günü
Delivery date and place	: 3 yıl
Maximum repair period	:
Warranty	:
Seller's	
Title	:
Address	:
Phone-fax	:
Invoice date and number	:

# FAZEON

## **DECLARATION OF CONFORMITY**

# **CE** EU REGULATIONS DECLARATION OF COMPLIANCE

We declare that the product specified below complies with the CE marking requirements of the European Union. This declaration guarantees that the product has been designed, manufactured and tested in accordance with the relevant European Union directives and standards.

Product Testing and Evaluation;

This product has been tested in authorized test laboratories to verify compliance with the specified standards.

Marka: FAZEON Model: X32F180

This declaration of conformity is only valid for the products listed above and allows use in the European Union market with the CE marking.

Note: This document officially documents that the product meets the CE marking requirements and complies with EU standards.



If this symbol appears on the product or product packaging, this waste cannot be disposed of as household waste. You must dispose of your waste by handling it in accordance with the applicable take-back scheme for the recycling of electrical and electronic equipment. For more information on recycling this equipment, please contact your local dealer or store. Recycling of materials ensures the conservation of natural resources and recycling without harming human health or the environment.