

FAZEON

27" E-LED MONITOR
USER MANUAL &
WARRANTY CERTIFICATE

X27F180QP

The logo for FAZEON, featuring the brand name in a bold, uppercase, sans-serif font. The letters are black and set against a light gray background. A large, white, diagonal stripe runs from the top-left corner towards the bottom-right, passing behind the text.

FAZEON

FAZEON Superior performance in every frame, total control in every game!
Our gaming monitors take your gaming experience to the next level with ultra-fast refresh rates and stunning visual clarity. Equipped with lag-free response times and vibrant colors, these monitors are designed to take you right to the heart of the game.
Every thing you need to win is right here!

WARNINGS

POWER

- Only use the power unit provided to power the device. Check mains rating before plugging the power unit in.
- Do not pull the cable to unplug the device.

SAFETY PRECAUTIONS

- Keep the device away from rain and humidity to prevent risk of fire and electrocution. Do not introduce material (solid or liquid) inside. If this should accidentally occur, disconnect the device from the mains and have it inspected by qualified personnel.
- Never open the device. In all cases, contact the qualified personnel or authorized service center for repairs.
- Keep the device away from children, to prevent accidental damage.
- Do not touch the device with wet hands to prevent electrical shock or mechanical damage.
- Do not use the device if it should fall or the external casing is damaged. Risk of electrocution if the device is used in such conditions. Contact the retailer or authorized installer.
- It is advisable to disconnect the power wire if the monitor is not used for a certain time.

INSTALLATION PRECAUTIONS

- To prevent overheating the device, arrange it in a position allowing the flow of air through the slots in the casing. Ensure at least 5 cm of free space when installing inside a rack. For the same reason, do not install sources of heat, such as radiators or hot air ducts. Keep away from direct sunlight. Do not install in areas subject to excessive dust, mechanical vibrations or shocks.
- Do not arrange this device on an unstable surface, such as a tottering or slanted table. The device could fall causing injury or mechanical failures.
- Do not install the device in a place where it could be exposed to humidity or water. Do not direct a jet of water onto the device: risk of fire, electrocution or mechanical failure.
- Stop using the device if water or other material should penetrate inside: risk of fire and electrocution. Contact the retailer or authorized installer.
- Slots and openings in the cabinet are provided for ventilation. These openings must not be blocked or covered.
- Do not place heavy or heat generating objects on top of the device: this could damage the casing and/or increase internal temperature causing faults.
- Do not cover the device with a cloth while it is running to prevent deforming the external casing and overheating the internal parts: risk of fire, electrocution and mechanical failure.
- Keep magnets and magnetized objects away from the device to prevent faults.
- Do not use the device in presence of smoke, vapor, humidity, dust or intense vibrations.
- Wait for a while before operating a device immediately after transporting it from a cold place to a warm place and vice versa. Wait on average for three hours: this will allow the device to adapt to the new ambient (temperature, humidity, etc.).
- The monitor is provided with a plastic base and rubber feet. It can be positioned on a horizontal surface, such as a desk or a table. Make sure that the device is fastened firmly and that it is not resting on unstable supports or surfaces. Dropping could cause severe injury and damage the device.
- Remember to adjust the brightness and contrast to obtain a perfect image.
- The monitor can also be installed on the wall by means of a bracket (not provided).

1.3.4 CLEANING THE DEVICE

- Rub delicately with a dry cloth to remove dust and dirt.
- Dip the cloth in neutral detergent if dirt cannot be eliminated with a dry cloth alone.
- Do not use volatile liquids (such a petrol, alcohol, solvents, etc.) or chemically treated clothes to clean the device to prevent deformation, deterioration or scratches to the paint finish.

1.3.5 PRIVACY AND COPYRIGHT

- The LED monitor is a device for Gaming. Recording of images is subject to the laws in force in your country. Recording of images protected by copyright is forbidden.

Product users shall be responsible for checking and respecting all local rules and regulations concerning monitoring and recording video signals. The manufacturing SHALL NOT BELIEABLE for use of this product not in compliance with the laws in force.

TABLE OF CONTENTS

1. Safety precautions
2. Maintenance
3. Box contents
4. Stand installation
5. Connectivity options
6. Basic operation
7. Back panel buttons
8. Adjusting the monitor
9. OSD menu
10. Technical specifications

1. SAFETY PRECAUTIONS

Do not expose the monitor to a humid environment, rain or other liquids.
Do not open the monitor housing to avoid any shock due to electrical or mechanical hazards.

Operation:





- Keep the monitor out of direct sunlight or other heat sources like stoves.
- Keep the monitor away from any liquid.
- Remove any object that could fall into the ventilation holes.
- Do not block the ventilation holes to avoid overheating.
- Do not knock or drop the monitor.

2. MAINTENANCE

CAUTION: Unplug the power cable from the outlet before cleaning the monitor.

- To clean your screen, slightly moisten a soft, clean cloth with water.
- Please use a special screen-cleaning tissue if possible.
- Do not use benzene, thinner, ammonia, abrasive cleaners or compressed air.
- Inappropriate cleaning solutions may damage the monitor or leave a milky film on screen or housing.
- Unplug the monitor if you are not going to use it for a longer time period.
- Do not expose the monitor to dust, liquids or a humid environment.
- In case the monitor gets in touch with any liquid, wipe it down immediately using a dry cloth.
- In case any liquid gets spilled into the ventilation holes, do not use the monitor anymore. Please contact a professional service technician.

3. BOX CONTENTS

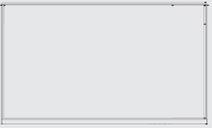
 <p>1x monitor</p>	 <p>1x stand stem</p>	 <p>1 x Screw 1x stand base</p>
 <p>1x power adapter</p>	 <p>1x DP cable</p>	 <p>Manual</p>
 <p>4x Screw</p>		

📄 Additional screws may be included as backup.

4. STAND INSTALLATION

ATTACHING THE STAND

1. Open the package, take out the support and base, insert the support into the base, and lock the base with a screw.

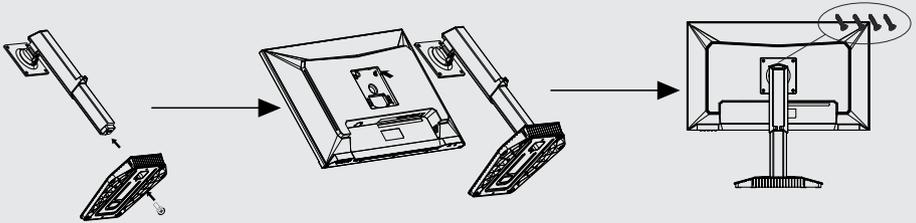


1.Insert the(base) into the socket at the bottom of the(bracket) ;then use a screwdriver to install the (screw) and tighten it.

2.After the base bracket is assembled, assemble the base bracket on the lock plate behind the (display) .



Note: When the monitor is upright, do not press the LCD screen by hand to avoid damage to the screen.

5.ADJUSTING THE MONITOR

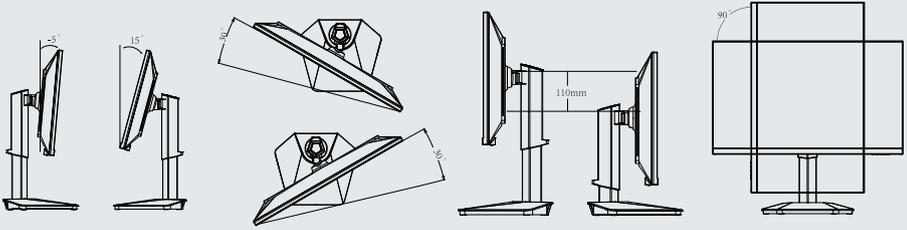

Tilting angle: $-5.0^{\circ}(+2.0^{\circ}); +15^{\circ}(+2.0^{\circ})$, Left/Right: 30° , Lift: 110mm, Oivot: 90° .

6.BACK PANEL BUTTONS



M V \wedge E \updownarrow

Button	Function
M	Menu button: Press to enter sub-menus/ quickly enter the main menu
V	Down button: Press to move down in the menu/quickly adjust the game crosshair
\wedge	Up button: Press to move up in the menu/quickly adjust the contextual mode
E	Exit/hot key: Press to return to the previous menu/quickly switch input signals of the port
\updownarrow	Power button: Press to turn on/off the monitor

7.BASIC OPERATION

Explanation of indicators



Indicator

Indicator: Steady blue light indicates the power is on and the monitor runs normally. Steady red light indicates no video source and no horizontal or vertical signal detected or low voltage. Please make sure your computer is turned on and all video cables are fully plugged in and/or connected.

Note: The above functions may be adjusted according to different models, and the specific model shall prevail.

8.CONNECTIVITY OPTIONS



DC IN



HDMI



HDMI



DP



DP



AUDIO

DC IN : Connect the power adapter.


HDMI port : Connect it to your computer.

DP port : Connect it to your computer .

AUDIO : You can connect your audio playback hardware.


8.1 CONNECTING THE POWER CABLE

Connect the power cable to the power connector of the monitor and then to a wall outlet.

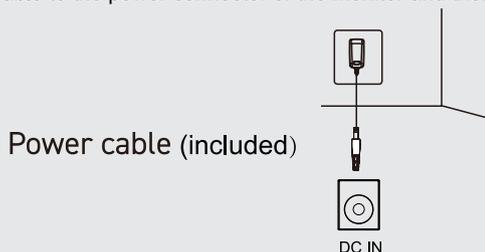


8.2 HDMI CONNECTIVITY

Use the HDMI cable to connect your monitor to your computer if it does not offer a DP port.

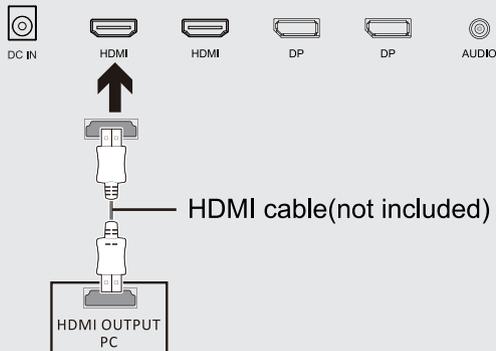

8.3 DP CONNECTIVITY

Use the DP cable to connect your monitor to your computer.

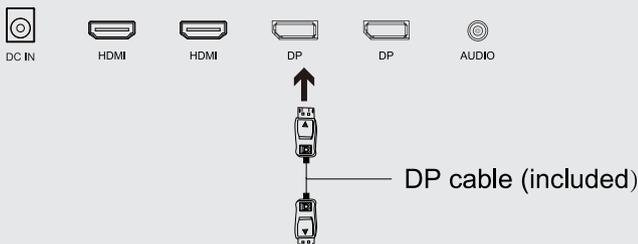


8.4 Connecting your headphone.

Plug in your headphones to receive audio signals from your computer.

If your headphones are connected to the monitor, other audio devices like speakers will be muted.

Headphones or other audio devices are not included in delivery.

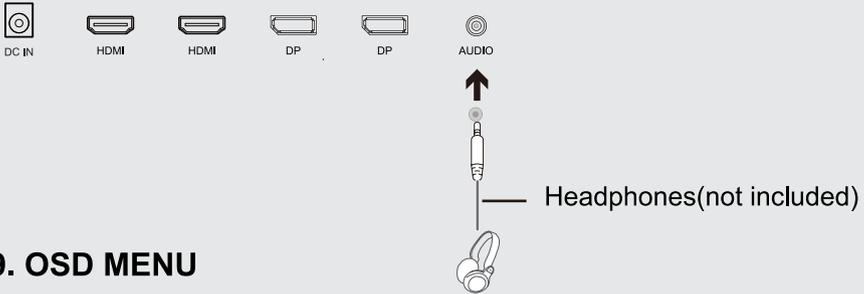


9. OSD MENU

The OSD menu (On-Screen Display) may be used to adjust your monitor's settings and appears on screen after turning on the monitor and pressing the menu button(see chapter 6).

☞ If you use the monitor for the first time, settings will automatically adjust themselves to your computer's configuration. Use the OSD menu and the graphics card software to change settings according to your needs.

1. Press any button to activate the navigation window (⏻, E, Λ, V, M).

2. Press (M) to enter the OSD menu.

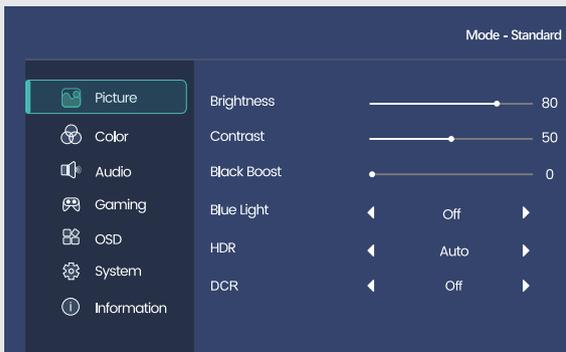

3. Press V or Λ to browse the functions of the OSD menu.

Highlight the desired function, then press M to enter the submenu.

Press V or Λ to browse the submenus, then press M to enter the submenu.

Press V or Λ to Adjust parameter values, then press M to confirm the settings and exit the current screen.

4. Press E to exit the current screen and the OSD menu.

Note: The above functions may be adjusted according to different models or software version upgrade, and the specific model shall prevail.

10. TECHNICAL SPECIFICATIONS

Model	X27F180QP
Screen size	27"
Aspect ratio	16:9
Backlight	E-LED
Brightness	300 cd/m ² (typical)
Panel	SS IPS
Resolution	2560X1440
Refresh rate	180Hz
Response time	MPRT 0.5MS
Viewing angle	≥178° (H) / ≥178° (V)
Contrast ratio	1000:1(static state)
VESA mounting	100x100mm
Colours	1.07B
Signal input	2 x HDMI , 2 x DP
Accessories	Power adapter , User manual , DP cable.

*Specifications are subject to change without notice.

USER'S ATTENTION

1. Before Installing the Device

- Read this manual carefully before using your monitor.
- Remove all packaging materials and protective films before opening your monitor.

2. Safety Precautions

- Connect the monitor to a power source of the specified voltage only.
- Be careful not to spill liquid on the device.
- Do not use the monitor in extremely hot, humid or dusty environments.
- Protect the power cord from being pinched or crushed.

3. Installation and Connection

- Place your monitor on a flat and stable surface.
- When installing the device, make sure that the ventilation holes are not blocked.
- Make sure the device is turned off before connecting cables.

4. Cautions During Use

- Take regular breaks to protect your eye health during prolonged use.
- Adjust the monitor's brightness and contrast settings to minimize eye strain.
- Avoid sharp movements that may damage the connection points on the back of the device.

5. Maintenance and Cleaning

- Always unplug your monitor before cleaning it.
- Use a soft, dry cloth to clean the screen.

Do not use harsh chemical cleaners.

6. Troubleshooting

- If the monitor does not turn on, make sure the power cable is connected correctly and there is power in the outlet.
- If there is flickering or discoloration in the image, check the connection cables.

7. Warranty and Technical Support

- If your product is under warranty, do not intervene except for authorized service.
- You can use the contact information provided in the user manual for technical support.

USER ERRORS

1. Incorrect Voltage Usage

- Connecting the monitor to a power source other than the specified voltage may cause the device to malfunction or completely break down.
- Solution: Make sure that the monitor's power adapter and the wall outlet voltage are compatible.

2. Blocking the Ventilation Holes

- Blocking the ventilation holes on the back of the monitor may cause the device to overheat and may damage the hardware.
- Solution: Place the monitor so that ventilation is free and leave at least 10 cm of space around it.

3. Liquid Contact

- Liquid spills on the monitor may cause a short circuit and permanent damage.
- Solution: Keep the monitor away from liquids and in the event of a liquid spill, turn off the power immediately and contact authorized service.

4. Incorrect Cable Connections

- Incorrectly connecting the HDMI, DisplayPort or power cable may cause image problems or damage to the ports.
- Solution: Check the correct ports before connecting the cables and make the connections slowly.

5. Rough Interventions

- Touching or pressing the monitor screen with hard objects may cause the screen to crack or pixel defects.
- Solution: Only touch the screen with a soft cloth and avoid physical impacts.

6. Long-Term Fixed Image Use

- Keeping the same image on the screen for a long time may cause "image burn-in" problem.
- Solution: Use a screen saver on your monitor or change the image on the screen during long-term use.

7. Incompatible Software and Driver Use

- Installing drivers or software that are incompatible with the monitor may cause problems in image performance.
- Solution: Use drivers and software recommended by the manufacturer.

8. Incorrect Cleaning Methods

- Using harsh chemical cleaners or wet cloths may damage the coating of the screen.
- Solution: Use only a soft, dry or slightly damp microfiber cloth when cleaning the screen.

9. Placing the Monitor on Unstable Surfaces

- Placing the monitor on a slanted or unstable surface may cause a risk of falling or tipping over.
- Solution: Place the monitor on a flat, stable, and non-slip surface.

10. Unauthorized Interventions

- Unauthorized interventions inside the monitor may void the warranty and cause more serious malfunctions.
- Solution: In case of a problem with the device, contact only an authorized service.
You can use the contact information provided in the user manual.

FAILURE AND TECHNICAL SUPPORT

1. What to do in case of damage;

Physical Damage;

- If you notice physical damage such as cracks, breaks or dents on the device:
- Stop using the monitor immediately.
- Disconnect the device from the power supply and unplug it.
- Remember that physical damages may be considered outside the scope of warranty.

Contact an authorized service.

Image Problems;

- If there are problems such as flickering, color distortion or image loss on the screen:
- Check the connection cables and make sure they are firmly connected.
- Test whether the problem is caused by the monitor by using a different cable or device.
- If the problem persists, get technical support.

Electrical Problems;

- If the monitor does not turn on or works erratically:
- Check the strength of the power cable.
- Try a different power source to make sure the outlet is working.
- If the problem persists, take the device to an authorized service.

2. Getting Technical Support

Authorized Service;

- If you detect any problem with your monitor, only get support from service centers authorized by the manufacturer.
- Unauthorized interventions may void the warranty of the device.

Contact;

- You can contact the manufacturer's customer service for technical support. Contact information is usually provided in the user manual or on the product box.
- Have the serial number and proof of purchase of the device with you.

3. Things to Consider When Getting Technical Support

- Back up your personal settings and data before sending the device for service.
 - Protect your monitor in its original packaging or by packing it securely during shipment to the service center.
- and it is recommended that you only get help from authorized technical support for safe operation.

DECLARATION OF CONFORMITY



We declare that the product specified below complies with the CE marking requirements of the European Union. This declaration guarantees that the product has been designed, manufactured and tested in accordance with the relevant European Union directives and standards.

Product Testing and Evaluation;

This product has been tested in authorized test laboratories to verify compliance with the specified standards.

Marka: FAZEON
Model: X27F180QP

This declaration of conformity is only valid for the products listed above and allows use in the European Union market with the CE marking.

Note: This document officially documents that the product meets the CE marking requirements and complies with EU standards.



If this symbol appears on the product or product packaging, this waste cannot be disposed of as household waste. You must dispose of your waste by handling it in accordance with the applicable take-back scheme for the recycling of electrical and electronic equipment. For more information on recycling this equipment, please contact your local dealer or store. Recycling of materials ensures the conservation of natural resources and recycling without harming human health or the environment.

WARRANTY CONDITIONS

Warranty Period;

- The warranty period is valid for *2 years* from the date of purchase of the product. The sales document (invoice or receipt) is accepted as the starting date of the warranty period.

Warranty Scope;

- The warranty covers malfunctions caused by manufacturing and material defects of the product.
- Internal components inside the case (fans, RGB lighting, USB ports, etc.) are under warranty.

Situations Not Covered by Warranty;

- Damages caused by user error (e.g. incorrect assembly, excessive force application, liquid contact, falling or impact).
- Repairs or modifications made by unauthorized persons.
- Malfunctions caused by incorrect voltage usage.
- Wear and tear caused by normal use (e.g. paint fading or scratching).

Benefiting from Warranty Service;

- In order to make a warranty claim, the sales document and warranty document must be presented together with the product.
- The product must be sent to the technical service in its original packaging or packaged appropriately.

Repair and Replacement Process;

- Repairable faults under warranty are repaired free of charge.
- If repair is not possible, the product is replaced with a new one or an equivalent product. The repair or replacement period is a maximum of *20 business days* from the date the product reaches the technical service.

Product Return and Replacement Conditions;

- The product can be returned in a flawless and unused condition within *14 days* after purchase. Defective products can be replaced or returned during the warranty period.

User Responsibilities;

- The product must be used in accordance with the user manual.
- Care must be taken against excessive heat, humidity or liquid contact.

Legal Rights;

- These warranty terms are provided in addition to the rights specified in the Consumer Law and do not limit your legal rights.

WARRANTY CERTIFICATE

Seller's
Title : G5F Teknoloji San. Tic. A.Ş.
Address : Yukarı Dudullu Mah. Necip Fazıl Bulvarı
Keyap Ticaret Merkezi E2 Blok No: 44/87
Ümraniye / İSTANBUL
Support Center : +90 (212) 288 4230
Stamp :

G5F TEKNOLOJİ
SANAYİ TİCARET ANONİM ŞİRKETİ
Yukarı Dudullu Mah. Necip Fazıl Blv.
No:44/87 Ümraniye/İstanbul
Sergazi V.D.:3881881884

GOODS
Type : Gaming monitor
Brand : FAZEON
Model : X27F180QP

Bandroll and serial number :
Delivery date and place :
Maximum repair period : 20 working day
Warranty : 3 year

Seller's
Title :
Address :
Phone-fax :
Invoice date and number :

FAZEON

FAZEON

27" E-LED MONİTÖR
KULLANIM KLAVUZU VE
GARANTİ BELGESİ

X27F180QP

FAZEON

FAZEON Her karede üstün performans, her oyunda tam kontrol!
Oyuncu monitörlerimiz, ultra hızlı yenileme hızları ve çarpıcı görsel netlik sunarak
oyun deneyiminizi zirveye taşıyor. Gecikmesiz tepki süresi ve canlı renklerle
donatılmış bu monitörler, sizi oyunun tam kalbine götürmek için tasarlandı.
Kazanmak için ihtiyaç duyduğunuz her şey burada!"

UYARILAR

GÜÇ

- Cihazı çalıştırmak için yalnızca sağlanan güç ünitesini kullanın. Güç ünitesini fişe takmadan önce şebeke değerini kontrol edin.
- Cihazın fişini çekmek için kabloyu çekmeyin.

GÜVENLİK ÖNLEMLERİ

- Yangın ve elektrik çarpması riskini önlemek için cihazı yağmur ve nemden uzak tutun. İçine malzeme (katı veya sıvı) sokmayın. Kazara böyle bir durum meydana gelirse, cihazın elektrik bağlantısını kesin ve yetkili personel tarafından kontrol edilmesini sağlayın.
- Cihazı asla açmayın. Her durumda, onarım için kalifiye personele veya yetkili servis merkezine başvurun.
- Kazara hasar görmesini önlemek için cihazı çocuklardan uzak tutunuz.
- Elektrik çarpmasını veya mekanik hasarı önlemek için cihaza ıslak elle dokunmayın. Cihaz düşerse veya dış kasası görürse cihazı kullanmayın. Cihaz bu koşullarda kullanılırsa elektrik çarpması riski vardır. Satıcıya veya yetkili montajcıya başvurun.
- Monitör belirli bir süre kullanılmıyacaksa güç kablosunun çıkarılması tavsiye edilir.

KURULUM ÖNLEMLERİ

- Cihazın aşırı ısınmasını önlemek için, muhafazadaki yuvalardan hava akışına izin verecek bir konuma yerleştirin. Bir rafın içine monte ederken en az 5 cm boş alan olduğundan emin olun. Aynı nedenle, radyatör veya sıcak hava kanalları gibi ısı kaynakları monte etmeyin. Doğrudan güneş ışığından uzak tutun. Aşırı toza, mekanik titreşimlere veya darbelerle maruz kalan alanlara kurmayın. Bu cihazı sallanan veya eğimli bir masa gibi dengesiz bir yüzeye yerleştirmeyin. Cihaz düşerek yaralanmalara veya mekanik arızalara neden olabilir.
- Cihazı neme veya suya maruz kalabileceği bir yere kurmayın. Cihazın üzerine su püskürtmeyin: yangın, elektrik çarpması veya mekanik arıza riski.
- Cihazın içine su veya başka bir madde girmesi durumunda cihazı kullanmayı bırakın: yangın ve elektrik çarpması riski. Satıcıya veya yetkili montajcıya başvurun.
- Kabindeki yuvalar ve açıklıklar havalandırma için sağlanmıştır. Bu açıklıklar engellenmemeli veya kapatılmamalıdır.
- Cihazın üzerine ağır veya ısı üreten nesnelere koymayın: bu, kasaya zarar verebilir ve/veya iç sıcaklığı artırarak arızalara neden olabilir.
- Dış kasanın deforme olmasını ve iç parçaların aşırı ısınmasını önlemek için cihaz çalışırken üzerini bir bezle örtmeyin: yangın, elektrik çarpması ve mekanik arıza riski.
- Arızaları önlemek için mıknatısları ve mıknatıslı nesnelere cihazdan uzak tutunuz.
- Cihazı duman, buhar, nem, toz veya yoğun titreşimlerin olduğu ortamlarda kullanmayınız.
- Cihazı soğuk bir yerden sıcak bir yere veya tam tersi bir yere taşıdıktan hemen sonra çalıştırmadan önce bir süre bekleyin. Ortalama üç saat bekleyin: bu, cihazın yeni ortama (sıcaklık, nem vb.) uyum sağlamasına olanak tanıyacaktır.
- Monitör plastik bir taban ve lastik ayaklarla donatılmıştır. Masa veya sehpa gibi yatay bir yüzeye üzerine yerleştirilebilir. Cihazın sıkıca sabitlendiğinden ve dengesiz desteklere veya yüzeylere dayanmadığından emin olun. Düşürmek ciddi yaralanmalara neden olabilir ve cihaza zarar verebilir.
- Mükemmel bir görüntü elde etmek için parlaklığı ve kontrastı ayarlamayı unutmayın.
- Monitör, bir braket (ürünle birlikte verilmez) aracılığıyla duvara da monte edilebilir.

1.3.4 CİHAZIN TEMİZLENMESİ

- Toz ve kiri temizlemek için kuru bir bezle nazikçe ovun.
- Kir sadece kuru bir bezle giderilemiyorsa bezi nötr deterjana batırın.
- Boyanın deforme olmasını, bozulmasını veya çizilmesini önlemek için cihazı temizlemek için uçucu sıvılar (benzin, alkol, çözücüler vb.) veya kimyasal işlem görmüş giysiler kullanmayın.

1.3.5 GİZLİLİK VE TELİF HAKKI

- LED monitör Oyun için bir cihazdır. Görüntülerin kaydedilmesi ülkenizde yürürlükte olan yasalara tabidir. Telif hakkı ile korunan görüntülerin kaydedilmesi yasaktır. Ürün kullanıcıları, video sinyallerinin izlenmesi ve kaydedilmesi ile ilgili tüm yerel kuralları ve düzenlemeleri kontrol etmek ve bunlara uymakla sorumludur. Üretici, bu ürünün yürürlükteki yasalara uygun olmayan kullanımından SORUMLU OLMAYACAKTIR.

İÇİNDEKİLER

1. Güvenlik önlemleri
2. Bakım
3. Kutu içeriği
4. Ayak kurulumu
5. Bağlantı seçenekleri
6. Temel kullanım
7. Arka panel düğmeleri
8. Monitörün ayarlanması
9. OSD menüsü
10. Teknik özellikler

1. GÜVENLİK ÖNLEMLERİ

Monitörü nemli ortamlara, yağmura veya diğer sıvılara maruz bırakmayın. Elektriksel veya mekanik tehlikelerden kaynaklı şok riskine karşı monitör kasasını açmayın.

Kullanım:




- Monitörü doğrudan güneş ışığına veya soba gibi ısı kaynaklarına maruz bırakmayın.
- Monitörü sıvılardan uzak tutun.
- Havalandırma deliklerine düşebilecek nesnelere uzaklaştırın.
- Aşırı ısınmayı önlemek için havalandırma deliklerini kapatmayın.
- Monitöre vurmeyin veya düşürmeyin.

2. BAKIM

UYARI: Monitörü temizlemeden önce güç kablosunu prizden çıkarın.

- Ekranı temizlemek için, yumuşak ve temiz bir bezi hafifçe nemlendirerek kullanın.
- Mümkünse özel ekran temizleme mendilleri kullanın.
- Benzen, tiner, amonyak, aşındırıcı temizleyiciler veya basınçlı hava kullanmayın.
- Uygunsuz temizlik malzemeleri monitöre zarar verebilir veya ekran/kasada sütlü bir tabaka bırakabilir.
- Monitörü uzun süre kullanmayacaksanız fişini çekin.
- Monitörü toz, sıvı veya nemli ortamlara maruz bırakmayın.
- Monitör herhangi bir sıvıyla temas ederse, hemen kuru bir bezle silin.
- Havalandırma deliklerine sıvı dökülürse, monitörü kullanmayın. Profesyonel bir servis teknisyeniyle iletişime geçin.

3. KUTU İÇERİĞİ

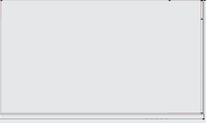
 <p>1 x Monitör</p>	 <p>1 x Stand Gövdesi</p>	 <p>1 x Vida 1 x Stand Tabanı</p>
 <p>1 x Güç Kablosu</p>	 <p>1 x DP Kablosu</p>	 <p>1 x Kullanım Klavuzu</p>
 <p>4 x Vida</p>		

📖 *Özellikler önceden haber verilmeksizin değiştirilebilir.

3. STAND KURULUMU

STANDIN TAKILMASI

1. Paketi açın, desteği ve tabanı çıkarın, desteği tabana yerleştirin ve tabanı bir vidayla kilitleyin.

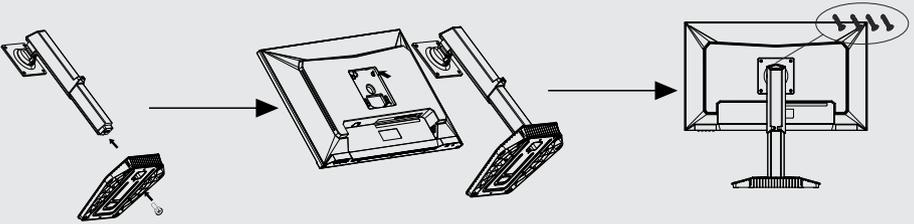


1.(Tabanı) (braketin) altındaki sokete yerleştirin; ardından (vidayı) takmak için bir tornavida kullanın ve sıkın.

2.Taban braketini monte edildikten sonra, taban braketini (ekranın) arkasındaki kilit plakasına monte edin.

⚠ Not: Monitör dik durumdayken, ekrana zarar vermemek için LCD ekrana elle bastırmayın.

5. MONİTÖRÜN AYARLANMASI

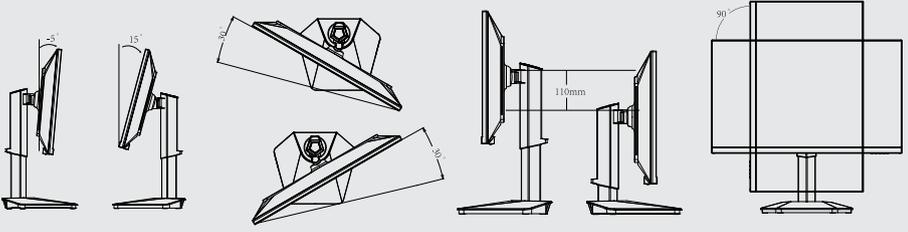

Eğim Açısı: -5.0°(+2.0°);+15°(+2.0°),Left/Right: 30°,Lift: 110mm,Oivot:90°.

6. ARKA PANEL DÜĞMELERİ




M V Λ E ⏻

Tuş	Fonksiyon
M	Menü düğmesi: Alt menülere girmek/ ana menüye hızlıca girmek için basın
V	Aşağı düğmesi: Menüde aşağı gitmek/oyun nişangahını hızlıca ayarlamak için basın
Λ	Yukarı düğmesi: Menüde yukarı gitmek için basın/bağlamsal modu hızlıca ayarlayın
E	Çıkış/sıcak tuş: Önceki menüye dönmek/portun giriş sinyallerini hızlıca değiştirmek için basın
⏻	Güç Tuşu : Cihazı açıp/kapatır.

7. TEMEL OPERASYON

Göstergelerin açıklanması

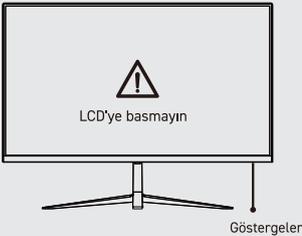

Gösterge: Sabit mavi ışık gücün açık olduğunu ve monitörün normal çalıştığını gösterir. Sabit kırmızı ışık olmadığını gösterir video kaynağı ve yatay veya dikey sinyal algılanmadı veya düşük voltaj. Lütfen bilgisayarınızın açık olduğundan emin olun açık ve tüm video kabloları tamamen takılı ve/veya bağlı olmalıdır.

Not: Yukarıdaki işlevler farklı modellere göre ayarlanabilir ve belirli model geçerli olacaktır.

8. BAĞLANTI SEÇENEKLERİ



DC IN



HDMI



HDMI



DP



DP



AUDIO

DC IN : Güç adaptörünü bağlayın.

HDMI port : Bilgisayarınıza bağlayın.


DP port : Bilgisayarınıza bağlayın.

AUDIO : Ses çalma donanımınızı bağlayabilirsiniz.

8.1 GÜÇ KABLOSUNUN BAĞLANMASI

Güç kablosunu monitörün güç konektörüne ve ardından bir duvar prizine bağlayın.

Güç kablosu (dahil)

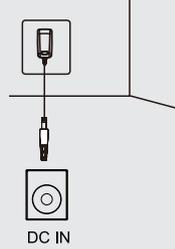

8.2 HDMI BAĞLANABİLİRLİĞİ

DP bağlantı noktası yoksa monitörünüzü bilgisayarınıza bağlamak için HDMI kablosunu kullanın.



DC IN



HDMI



HDMI



DP



DP



AUDIO



HDMI kablosu (dahil değildir)



8.3 DP BAĞLANABİLİRLİĞİ

Monitörünüzü bilgisayarınıza bağlamak için DP kablosunu kullanın.



DC IN



HDMI



HDMI



DP



DP




AUDIO



DP kablosu (dahil)

8.4 Kulaklığınızı bağlayın.

Bilgisayarınızdan ses sinyalleri almak için kulaklığınızı takın Kulaklığınız monitöre bağlıysa, hoparlörler gibi diğer ses cihazlarının sesi kapatılacaktır. Kulaklıklar veya diğer ses cihazları teslimata dahil değildir.

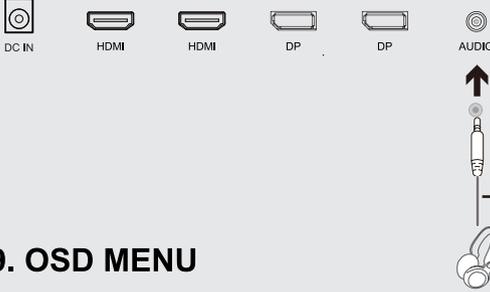


9. OSD MENU

OSD menüsü (Ekran Üstü Görüntü) monitörünüzün ayarlarını yapmak ve monitörü açıp menü düğmesine bastıktan sonra ekranda görünmek için kullanılabilir (bkz. bölüm 6).

☑ Monitörü ilk kez kullanıyorsanız, ayarlar bilgisayarınızın yapılandırmasına göre otomatik olarak ayarlanacaktır. Ayarları ihtiyaçlarınıza göre değiştirmek için OSD menüsünü ve grafik kartı yazılımını kullanın.

1.Navigasyon penceresini etkinleştirmek için herhangi bir düğmeye.basın(ϕ , E, \wedge , V, M)

2.OSD menüsüne girmek için (M) düğmesine basın.

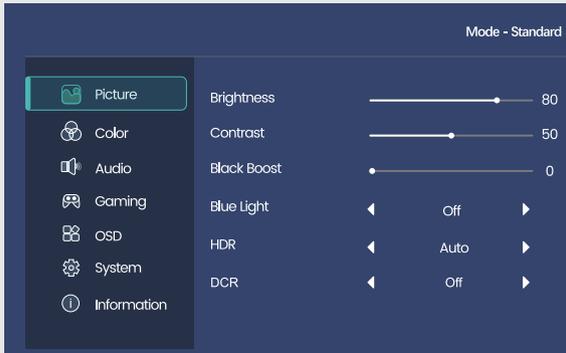

OSD menüsünün işlevlerine göz atmak için V veya düğmesine basın.

İstediğiniz işlevi vurgulayın, ardından alt menüye girmek için M düğmesine basın.

Alt menüye göz atmak için V veya düğmesine basın, alt menüye girmek için M düğmesine basın.

Parametre değerlerini ayarlamak için V veya düğmesine basın, ardından ayarları onaylamak ve geçerli ekrandan çıkmak için M düğmesine basın.

4.Geçerli ekrandan ve OSD menüsünden çıkmak için E düğmesine basın.

Not: Yukarıdaki işlevler farklı modellere veya yazılım sürümü yükseltmesine göre ayarlanabilir ve belirli model geçerli olacaktır.

10. TEKNİK ÖZELLİKLER

Model	X27F180QP
Screen size	27"
Aspect ratio	16:9
Backlight	E-LED
Brightness	300 cd/m ² (typical)
Panel	SS IPS
Resolution	2560X1440
Refresh rate	180Hz
Response time	MPRT 0.5MS
Viewing angle	≥178° (H) / ≥178° (V)
Contrast ratio	1000:1(static state)
VESA mounting	100x100mm
Colours	1.07B
Signal input	2 x HDMI , 2 x DP
Accessories	Power adapter , User manual , DP cable.

*Özellikler önceden haber verilmeksizin değiştirilebilir.

KULLANICININ DİKKATİNE

1. Cihazı Kurmadan Önce

Monitörünüzü kullanmadan önce bu kılavuzu dikkatlice okuyun.
Monitörünüzü açmadan önce tüm ambalaj malzemelerini ve koruyucu filmleri çıkarın.

2. Güvenlik Uyarıları

Monitörü yalnızca belirtilen voltajda bir güç kaynağına bağlayın.
Cihazın üzerine sıvı dökmemeye özen gösterin.
Monitörü aşırı sıcak, nemli veya tozlu ortamlarda kullanmayın.
Güç kablosunu sıkışma veya ezilmelere karşı koruyun.

3. Kurulum ve Bağlantı

Monitörünüzü düz ve stabil bir yüzeye yerleştirin.
Cihazı kurarken, havalandırma deliklerinin kapatılmadığından emin olun.
Kabloları bağlamadan önce cihazın kapalı olduğundan emin olun.

4. Kullanım Sırasında Dikkat Edilmesi Gerekenler

Uzun süreli kullanımlarda göz sağlığını korumak için düzenli aralıklarla mola verin.
Monitörün parlaklık ve kontrast ayarlarını, göz yorgunluğunu en aza indirecek şekilde ayarlayın.
Cihazın arkasında bulunan bağlantı noktalarına zarar verebilecek sert hareketlerden kaçınin.

5. Bakım ve Temizlik

Monitörünüzü temizlemeden önce mutlaka fişini prizden çekin.
Ekranı temizlemek için yumuşak, kuru bir bez kullanın.
Sert kimyasal temizleyiciler kullanmayın.

6. Sorun Giderme

Monitör açılmıyorsa, güç kablosunun doğru bağlandığından ve prizde elektrik olduğundan emin olun.
Görüntüde titreme veya renk bozukluğu varsa bağlantı kablolarını kontrol edin.

7. Garanti ve Teknik Destek

Ürününüz garanti kapsamındaysa yetkili servis dışında müdahalede bulunmayın.
Teknik destek için kullanım kılavuzunda belirtilen iletişim bilgilerini kullanabilirsiniz.

KULLANICI HATALARI

1. Yanlış Voltaj Kullanımı

- Monitörü belirtilen voltaj dışında bir güç kaynağına bağlamak, cihazın arızalanmasına veya tamamen bozulmasına neden olabilir.
- Çözüm: Monitörün güç adaptörünün ve priz voltajının uyumlu olduğundan emin olun.

2. Havalandırma Deliklerinin Kapatılması

- Monitörün arka kısmındaki havalandırma deliklerinin kapatılması, cihazın aşırı ısınmasına yol açar ve donanıma zarar verebilir.
- Çözüm: Monitörü, havalandırmanın serbest kalacağı şekilde yerleştirin ve çevresinde en az 10 cm boşluk bırakın.

3. Sıvı Teması

- Monitöre sıvı dökülmesi kısa devreye ve kalıcı hasara neden olabilir.
- Çözüm: Monitörü sıvılardan uzak bir yerde konumlandırın ve sıvı dökülmesi durumunda cihazı hemen kapatarak yetkili servise başvurun.

4. Yanlış Kablo Bağlantıları

- HDMI, DisplayPort veya güç kablosunun yanlış takılması görüntü sorunlarına veya bağlantı noktalarının hasar görmesine neden olabilir.
- Çözüm: Kabloları bağlamadan önce doğru bağlantı noktalarını kontrol edin ve bağlantıları yavaşça gerçekleştirin.

5. Sert Müdahaleler

- Monitörün ekranına sert cisimlerle dokunmak veya bastırmak ekranın çatlamasına ya da piksel bozukluklarına yol açabilir.
- Çözüm: Ekranı yalnızca yumuşak bir bezle müdahale edin ve fiziksel darbelerden kaçının.

6. Uzun Süreli Sabit Görüntü Kullanımı

- Uzun süre aynı görüntünün ekranda kalması, "görüntü yanması" (burn-in) sorununa neden olabilir.
- Çözüm: Monitörünüzde ekran koruyucu kullanın veya uzun süreli kullanımlarda ekrandaki görüntüyü değiştirin.

7. Uyumsuz Yazılım ve Sürücü Kullanımı

- Monitörle uyumsuz sürücülerin veya yazılımların yüklenmesi, görüntü performansında sorunlara yol açabilir.
- Çözüm: Üreticinin önerdiği sürücüler ve yazılımları kullanın.

8. Yanlıř Temizlik Yöntemleri

- Sert kimyasal temizleyiciler veya ıslak bez kullanmak, ekranın kaplamasına zarar verebilir.
- Çözüm: Ekranı temizlerken yalnızca yumuřak, kuru veya hafif nemli bir mikrofiber bez kullanın.

9. Monitörün Dengesiz Yüzelele Yerleřtirilmesi

- Monitörün eğik veya dengesiz bir yüzelele yerleřtirilmesi, düřme veya devrilme riskine yol açabilir.
- Çözüm: Monitörü düz, stabil ve kaymaz bir yüzelele yerleřtirin.

10. Yetkisiz Müdahaleler

- Monitörün iç kısmına yetkisiz müdahale edilmesi, cihazın garanti kapsamı dıřına çıkmasına ve daha büyük arızalara neden olabilir.
- Çözüm: Cihazda bir sorun olduęunda yalnızca yetkili servise bařvurun.kullanım kılavuzunda belirtilen iletiřim bilgilerini kullanabilirsiniz.

ARIZA VE TEKNİK DESTEK

1. Hasar Durumunda Yapılması Gerekenler;

Fiziksel Hasar;

- Cihazda çatlak, kırık veya ezik gibi fiziksel hasarlar fark ederseniz:
- Monitörü kullanmayı derhal durdurun.
- Cihazın elektrik bağlantısını kesin ve fişi prizden çekin.
- Fiziksel hasarların garanti kapsamı dışında değerlendirilebileceğini unutmayın. Yetkili servisle iletişime geçin.

Görüntü Sorunları;

- Ekranda titreme, renk bozulması veya görüntü kaybı gibi sorunlar varsa:
- Bağlantı kablolarını kontrol edin ve sıkıca takılı olduklarından emin olun.
- Farklı bir kablo veya cihaz kullanarak sorunun monitörden kaynaklanıp kaynaklanmadığını test edin.
- Sorun devam ederse teknik destek alın.

Elektrik Sorunları;

- Monitör açılmıyorsa veya düzensiz çalışıyorsa:
- Güç kablosunun sağlamlığını kontrol edin.
- Prizin çalıştığından emin olmak için farklı bir elektrik kaynağı deneyin.
- Sorun çözülmezse cihazı yetkili servise götürün.

2. Teknik Destek Alımı

Yetkili Servis;

- Monitörünüzde herhangi bir sorun tespit ettiğinizde, yalnızca üretici tarafından yetkilendirilmiş servis merkezlerinden destek alın.
- Yetkisiz müdahaleler cihazın garanti kapsamı dışında kalmasına neden olabilir.

İletişim;

- Teknik destek için üreticinin müşteri hizmetleriyle iletişime geçebilirsiniz. İletişim bilgileri genellikle kullanım kılavuzunda veya ürün kutusunda yer alır.
- Cihazın seri numarasını ve satın alma belgesini yanınızda bulundurun.

3. Teknik Destek Alırken Dikkat Edilmesi Gerekenler

- Cihazı servise göndermeden önce kişisel ayarlarınızı ve verilerinizi yedekleyin.
- Servis merkezine gönderim sırasında monitörünüzü orijinal ambalajında veya güvenli bir şekilde paketleyerek koruyun.ü ve güvenli bir şekilde çalışabilmesi için yalnızca yetkili teknik destekten yardım almanız önerilir.

UYGUNLUK BEYANI

CE AB YÖNETMELİĞİNE UYUM BEYANI

Aşağıda belirtilen ürünün, Avrupa Birliği'nin CE işareti gerekliliklerine uygun olduğunu beyan ederiz. Bu beyan, ürünün ilgili Avrupa Birliği direktifleri ve standartlarına uygun olarak tasarlandığını, üretildiğini ve test edildiğini garanti eder.

Ürün Testi ve Değerlendirme;

Bu ürün, belirtilen standartlara uygunluğu doğrulamak amacıyla yetkili test laboratuvarlarında test edilmiştir.

Marka: FAZEON
Model: X27F180QP

Bu uygunluk beyanı, yalnızca yukarıda belirtilen ürünler için geçerlidir ve Avrupa Birliği pazarında CE işareti ile kullanılmasına izin verir.

Not: Bu belge, ürünün CE işareti gerekliliklerini karşıladığını ve AB standartlarına uygun olduğunu resmi olarak belgelemektedir.



Ürün veya ürün ambalajının üzerinde bu sembolün görülmesi halinde bu atık ev eşyası atığı olarak atılamaz. Atığınızı, elektrikli ve elektronik cihazların geri dönüşümünü için uygulanabilir geri alma şemasına göre ele alarak atmalısınız. Bu donanımın geri dönüşümü hakkında daha fazla bilgi için yerel bayiye yada mağazaya başvurunuz. Materyallerin geri dönüşümü doğal kaynakların korunmasını ve insan sağlığına ve çevreye zarar verilmeksizin geri dönüştürülmesini güvence etmektedir.

GARANTİ ŞARTLARI

Garanti Süresi;

- Garanti süresi, ürünün satın alındığı tarihten itibaren *2 yıl* geçerlidir. Satış belgesi (fatura veya fiş) garanti süresinin başlangıç tarihi olarak kabul edilir.

Garanti Kapsamı;

- Garanti, ürünün üretim ve malzeme hatalarından kaynaklanan arızaları kapsar.
- Kasa içindeki dahili bileşenler (fanlar, RGB aydınlatmalar, USB portlar vb.) garanti kapsamındadır.

Garanti Dışında Kalan Durumlar;

- Kullanıcı hatasından kaynaklanan hasarlar (örneğin, yanlış montaj, aşırı güç uygulama, sıvı teması, düşme veya darbe).
- Yetkisiz kişiler tarafından yapılan tamir veya modifikasyonlar.
- Yanlış voltaj kullanımı sonucu oluşan arızalar.
- Normal kullanım sonucu oluşan aşınma ve yıpranma (örneğin, boyanın solması veya çizilmesi).

Garanti Hizmetinden Yararlanma;

- Garanti talebinde bulunmak için, ürünle birlikte satış belgesi ve garanti belgesi ibraz edilmelidir.
- Ürün, orijinal ambalajında veya uygun bir şekilde paketlenerek teknik servise gönderilmelidir.

Tamir ve Değişim Süreci;

- Garanti kapsamında onarılabılır arızalar ücretsiz olarak tamir edilir.
- Onarım mümkün değilse, ürün yenisiyle değiştirilir veya eşdeğer bir ürünle ikame edilir.
- Onarım veya değişim süresi, ürünün teknik servise ulaşmasından itibaren en fazla *20 iş günü*dür.

Ürün İade ve Değişim Şartları;

- Ürün, satın alındıktan sonraki *14 gün* içinde kusursuz ve kullanılmamış bir durumda iade edilebilir.
- Kusurlu ürünlerde, garanti süresi boyunca değişim veya iade işlemi yapılabilir.

Kullanıcı Sorumlulukları;

- Ürün kullanım kılavuzuna uygun şekilde kullanılmalıdır.
- Aşırı ısıya, neme veya sıvı temasına karşı dikkatli olunmalıdır.

Yasal Haklar;

- Bu garanti şartları, Tüketici Kanunu'nda belirtilen haklara ek olarak sunulmaktadır ve yasal haklarınızı kısıtlayamaz.

GARANTİ BELGESİ

Satıcı firmanın

Ünvanı : G5F Teknoloji San. Tic. A.Ş.
Adres : Yukarı Dudullu Mah. Necip Fazıl Bulvarı
Keyap Ticaret Merkezi E2 Blok No: 44/87
Ümraniye / İSTANBUL
Destek Merkezi : +90 (212) 288 4230
Kaşe :

G5F TEKNOLOJİ
SANAYİ TİCARET ANONİM ŞİRKETİ
Yukarı Dudullu Mah. Necip Fazıl Biv.
No:44/87 Ümraniye/İstanbul
Sarıgazi V.D.:3881881884

MALIN

Cinsi : Oyuncu monitörü
Markası : FAZEON
Modeli : X27F180QP

Bandrol ve seri no :
Beslim tarihi ve yeri :
Azami tamir süresi : 20 iş günü
Garanti : 3 yıl

Satıcı firmanın

Ünvan :
Adresi :
Tel-faks :
Fatura tarihi ve no :

FAZEON